

Disassembly of 6" gun with bushing barrel

1. Please make sure that the gun is completely unloaded! Always wear eye protection because gun contains spring loaded party.



2. Always point muzzle away from face to prevent injury.

3. Pull Slide backwards until halfmoon notch lines with top read of slide stop.



4. Press slide stop shaft on right side of frame and remove slide stop by pulling it out left side of frame. Than you can pull slide forwards from frame.


5. Put allen wrench into front of guide rod and open center-clockwise while fixing the end of the guide rod with other hand. **Please note that plug is under heavy tension from recoil spring.**



6. You can now carefully remove the front end of guide rod through front of slide and rear end with spring and plug through rear end of slide.



7. Using the bushing wrench, turn the bushing 1/8 turn center clockwise. Tilt barrel link forwards. Now you can take the barrel with bushing and plug through the front end of slide.

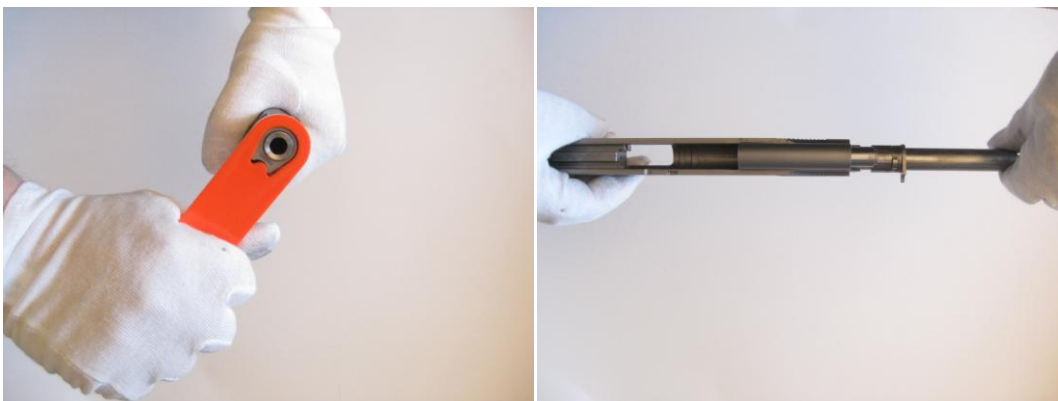

8. Assembly is done by basically reversing order of disassembly. Install plug properly that front of plug is centering the bushing.



Do not shoot the gun if this is not done!

9. Before you install the slide stop make sure that the link is in one line with drills drills in frame.

