

Disassembly of gun with bullbarrel

1. Please make sure that the gun is unloaded! Always wear eye protection because gun contains spring loaded parts.



2. Always point muzzle away from face to prevent injury.

3. Pull slide backwards until the half-moon notch lines with top rear of slide stop.




4. Press slide stop shaft on right side of frame and remove slide stop by pulling it out left side of frame. Then you can pull slide forwards from frame.



5. Turn the slide.


6. If you push the guide rod forward, you will note smann drill. Put a small pin into this drill.
Please note that plug is under heavy tension from recoil spring.

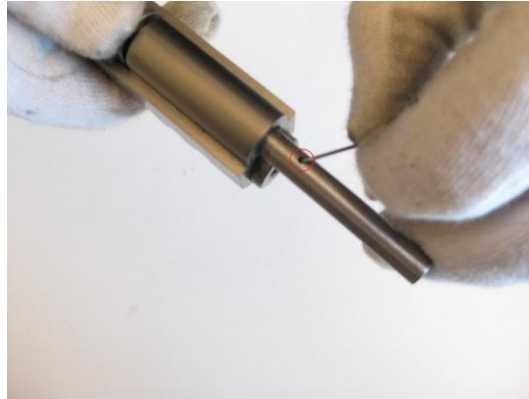

7. Let guide rod slowly come backwards until plug is touching the pin. Now you can remove rod, spring and plug together backwards.



8. Tilt barrel link forwards and remove barrel through front of slide.

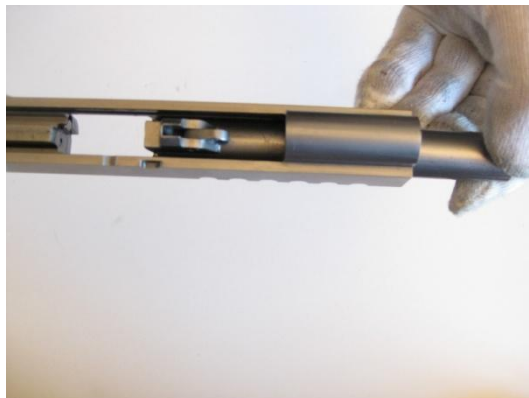

9. Assembly is done basically reversing order of disassembly. Install plug properly that front of plug lines with front side of slide.

Do not shoot the gun if this is not done!

10. Before you install the slide stop make sure that the link is in one line with drills in frame.

